









Quickstart software Verdyn


The built-in or external PGD1 operating display has six operating keys and a graphic display. This can be used for reading, configuring and setting control.

Display


Internal	External	Description
		- Displayed list of working alarms - Resetting alarms by manual reset (press twice)
	PRG	- Not in use
	ESC	- Go back to the previous screen
		- Scroll through the screen - Increase/decrease value
		- Switch from view to change parameter - Confirm the changed parameter and go back to the parameters

Display (home screen)

Scroll through the screen to see the following home screens:

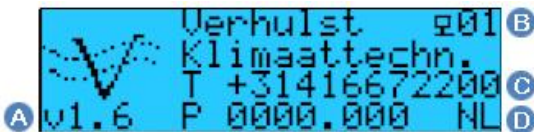


A	Software version number
B	P-LAN network
C	Telephone number OC-Verhulst
D	Software language setting

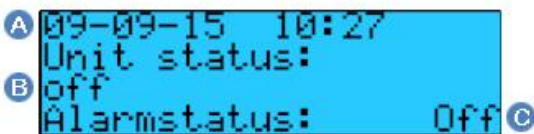

A	Date/Time
B	Unit status
C	Alarm status



A	Temperature suction
B	Temperature blow in
C	Temperature return

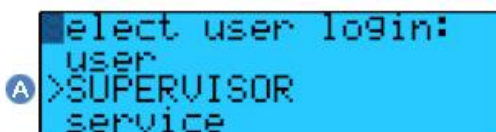

A	Select user
---	-------------

Access

To gain access to the 'service' menu use password '3333'.

Switching the unit on

- Make sure that everything is correctly connected with right-turning field! Turn the main switch to I.
- Log in as 'service' user
- Go to 'Unit Switch'
- Change 'Unit' to the 'Auto' position

Changing temperature set point

- Log in as 'service' user
- Go to 'Setpoints'
- Select 'Temp. Control'
- Change 'Setp.' to the desired value

Changing temperature set point

- Log in as 'service' user
- Go to 'Setpoints'
- Select 'Flow Control'
- Change 'Setp.' to the desired value

Full manual

You can find the full manual at <https://www.orangeclimate.com/nl/ocverhulst/downloads> or make contact using the details below.

T +31(0)416 6722 200

www.oc-verhulst.nl



Changes reserved.