









Quickstart software VKTrs

The built-in or external PGD1 operating display for the VKT Plus and the Basic has six operating keys and a graphic display. This can be used for reading, configuring and setting control.




 

 



 
Display

Internal	External	Description
		- Displayed list of working alarms - Resetting alarms by manual reset (press twice)
	PRG	- Access to the main menu
	ESC	- Go back to the previous screen
		- Scroll through the screen - Increase/decrease value
		- Switch from view to change parameter - Confirm the changed parameter and go back to the parameters

Display (home screen)



A	Current set time
B	Temperature display
C	Current selected sensor
D	P-LAN network
E	Status
F	See next icon description

Icon	Description
	Fan(s) working
	No humidification or dehumidification working
	Cooling working (temperature control)
	Cooling working (dehumidification control)
	Heating working
	Humidification working
	Frost protection working
	Heat recovery working (plate exchanger)
	Heat recovery working (thermal wheel)
	Free cooling or heating working

Switching the unit on

- Make sure that everything is correctly connected with right-turning field! Turn the main switch to I.
- Switch the unit on using the controller in menu <A01>
- A selection can be made from the different control positions:
 - Auto (timer program)
 - Comfort
 - Pre-Comfort
 - Economy

Changing set points

- Make sure that the status in screen <A01> is 'OFF'.
- Go to screen <B01>. When the timer program is switched off, the set points for the control strategy can be changed here.
- When the timer program is switched on, the set points for the control strategy are changed in the screen <B02>, <B03> and <B04>.
- If the air handling unit has 2 floors, one can use screen <B05> to choose control based on the supply or return components.

Full manual

You can find the full manual at <https://www.orangeclimate.com/nl/ocverhulst/downloads> or make contact using the details below.

T +31(0)416 6722 200

www.oc-verhulst.nl



Changes reserved.